 





 

 

 




 

 



 





 

 

 











Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	Sleep		Sleep / Timer
	4		4
	5		5
	6		6
	Still		Eject / Surround
	7		7
	8		8
	9		9
	Aspect		Zoom / Size
	-/--		Guide / EPG / -/--
	0		0
	Prev. Ch.		Back / Return

Original	Substituto	Original	Substituto
	Source		AV / Input / RDS
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Info		Info / Angle
	Nicam/A2 / Audio		Audio / Lang I/II
	Auto		Setup / OPT /
	P.Mode		Picture / Format
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	S.Mode		Sound / Title
	Down		Down
	Exit		Exit / Cancel / Clear





Original	Substituto
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 I<< / Index
	 >>I / Cancel
	 << / Reveal
	 >> / Hold
	 Text / Goto
	 Play/Pause / Size
	 Pause / Step / Freeze
	 Stop / Subpage
	 Subtitle / EQ
	 Rec Menu
	 CH List
	 FAV / Marker / PC
	 USB

Original	Substituto
	 DTV / Radio
	 DTV
	 REC / Repeat

