














 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




Original	Substituto	Original	Substituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Substituto	Original	Substituto
 Vol -	 Vol -	 MUTE	 SHIFT
 CH +	 Ch +	 TV	 DVD
 CH -	 Ch -	 SAT	 AUX
 Exit	 Exit	 PLAY MODE	 REC MODE
 Red / USB Left	 Red	 FF	 II
 Red / USB Left	 Shift + Left	 ■	 ▶
 Green / USB	 Green	 RR	 ■
 Green / USB	 Shift + Down	 SOUND	 AD
 Yellow / USB Up	 Yellow	 SETTINGS	 LIST
 Yellow / USB Up	 Shift + Up	 DUAL	 SUBT
 Blue / USB Right	 Blue	 PICTURE	 OPT
 Blue / USB Right	 Shift + Right	 ECO	 3D
 Up	 Up	 FORMAT	 TIMER
 Left	 Left	 E-MANUAL	 REPEAT
 Enter	 Ok	 ZOOM	 TEXT
 Right	 Right	 D.MENU	 AV
 Down	 Down	 TOP MENU	 DISPLAY INFO





 

 
 


 
 
 
 
 

 
 
 



 
 


 
 

 
Original	Substituto	Original	Substituto
PREV QV	SETTINGS OPT Options	SIZE	Size
NEXT FAV	FAV PRE-CH Pre Ch	ESCAP PROG MIX	Prog / Mix
SOURCE	TIMER AV AV	ESCAP PROG MIX	Prog / Mix
SLEEP	PROG SLEEP Sleep	RETURN SUBPG	Return / SUBPG
PICTURE	SHIFT + PICTURE FORMAT Shift + Format	REPEAT REVEAL	Repeat / Reveal
SOUND	SHIFT + SOUND DUAL Shift + Dual	SEARCH HOLD	Search / Hold
DISPLAY	DISPLAY INFO Info		
TOP I/II	SOUND DUAL Dual		
REV FAV-	<<		
FWD FAV+	>>		
TEXT USR/CR	APP MEDIA Media		
TEXT USR/CR	REPEAT TEXT Text		
INDEX	PLAY MODE Play		
INDEX	SHIFT + DISPLAY INFO Shift + Info		
INDEX	PAUSE Pause		
CANCEL	STOP Stop		
CANCEL	SHIFT + CLEAR EXIT Shift + Exit		

Original	Substituto
PICTURE FORMAT	Format
HOME SMART	Smart
SHIFT + PROG SLEEP	Shift + Sleep
RETURN BACK	Back
SHIFT + RETURN BACK	Shift + Back
SEARCH TV/R	TV/R





Original	Substituto
	Power
	AV
	Exit
	Menu
	Dual
	Media
	Options
	Text
	TV/R
	1
	2
	3
	6
	5
	4
	7
	8

Original	Substituto
	9
	0
	Guide
	Up
	Right
	Ok
	Left
	Down
	Subt
	Pause
	Rec
	<<
	Play
	>>
	Shift + Media
	Shift + Dual
	Shift + 6

