 

 




 

 

 

 





	Original	Substituto		Original	Substituto
POWER	Power		Power	MAIN PAGE	Main Page
MENU	Menu		Menu	PLAY/PAUSE	Play
TITLE	Title		List	PLAY/PAUSE	Pause
SETUP	Setup		Options	STOP	Stop
ANGLE	Angle		Red	REW	<<
REPEAT	Repeat		Text	FF	>>
A-B REPEAT	A-B Repeat		TV/R	PREV	I<<
SLOW	Slow		Pre Ch	NEXT	>>I
FILE INFO	File Info		Info	VIDEO	Video
TIME SEARCH	Time Search		AV	AUDIO	Audio
Brt. CONT.	Brt Cont.		Green	SUBTITLE	Subtitle
MEDIA TYPE	Media Type		Media	Scr.SIZE	Scr Size
Up	Up		Up	VOLUME	Vol+
Down	Down		Down	VOLUME	Vol-
Right	Right		Right	MUTE	Mute
Left	Left		Left	1	1
ENTER	Enter		Ok	2	2

	Original	Substituto		Original	Substituto
HOME	Smart		Smart	TV	DVD
PLAY MODE	Play		Play	SAT	AUX
PLAY/PAUSE	Pause		Pause	REC MODE	
STOP	Stop		Stop	PLAY MODE	II
REW	<<		<<	DISC NAV	LIST
FF	>>		>>	SOUND	DUAL
PREV	I<<		I<<	AD	SUBT
NEXT	>>I		>>I	SETTINGS	OPT
VIDEO	Video		Yellow	PROG	SEARCH
AUDIO	Audio		Dual	PICTURE	FORMAT
SUBTITLE	Subtitle		Subt	ECO	3D
Scr.SIZE	Scr Size		Format	E-MANUAL	REPEAT
VOLUME	Vol+		Vol +	ZOOM	TIMER
VOLUME	Vol-		Vol -	D.MENU	TEXT
MUTE	Mute		Mute	AV	
1	1		1		
2	2		2		



