



Original	Substituto	Original	Substituto
REC PAUSE	Rec Pause		Pause
	CH+	+ CH	Ch +
	CH-	- CH	Ch -
EPG	EPG	-/~/ GUIDE	Guide
AV OUT /AV IN	AV Out/AV In	TIMER AV	AV
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
TV/ RADIO	Tv/Radio	SEARCH TV/R	TV/R
	Recall	FAV PRE-CH	Pre Ch
SUBT	Subt	AD SUBT	Subt
TTX	TTX	REPEAT TEXT	Text
AUDIO	Audio	SOUND DUAL	Dual
MENU	Menu	TOP MENU MENU	Menu
EXIT	Exit	CLEAR EXIT	Exit
VOL+	Vol+	+ VOL	Vol +
VOL-	Vol-	- VOL	Vol -
MUTE	Mute	MUTE	Mute
MODE	Mode	HOME SMART	Smart
REC LIST	Rec List	DISC NAV LIST	List
ZOOM	Zoom	ZOOM	Eject
	Up		Up
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	Ok
	Play/Pause	PLAY MODE	Play





	Original	Substituto	Original	Substituto
	Rec	 Rec		
	Stop	 Stop		
	<</FAV	 <<		
	>>/Info	 >>		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

