 
 
 

 

 


 



 
 

 


 
 
 






Original	Substituto	Original	Substituto
 Power	 Power	 A-B	 TV/R
 Sleep	 Sleep	 Program	 Shift + Sleep
 Dimmer	 Media	 Volume+	 Vol +
 Open/Close	 Eject	 Volume-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 Title	 List
 3	 3	 Menu/PBC	 Menu
 4	 4	 Return	 Back
 5	 5	 Setup	 Options
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 >10	 Guide	 Stop	 Stop
 Repeat	 Text	 Play	 Play
 Goto	 3D	 Pause	 Pause

Original	Substituto	Original	Substituto
 A-B	 TV/R	 TV	 MUTE
 Program	 Shift + Sleep	 DVD	 SAT
 Volume+	 Vol +	 AUX	 REC MODE
 Volume-	 Vol -	 PLAY MODE	 PLAY MODE
 Mute	 Mute	 FF	 FF
 Title	 List	 PAUSE	 PAUSE
 Menu/PBC	 Menu	 STOP	 STOP
 Return	 Back	 DISC NAV	 DISC NAV
 Setup	 Options	 SOUND	 SOUND
 Up	 Up	 AD	 AD
 Down	 Down	 SETTINGS	 SETTINGS
 Right	 Right	 LIST	 LIST
 Left	 Left	 DUAL	 DUAL
 Enter	 Ok	 SUBT	 SUBT
 Stop	 Stop	 PICTURE	 PICTURE
 Play	 Play	 ECO	 ECO
 Pause	 Pause	 SLEEP	 SLEEP
		 TV/R	 TV/R
		 FORMAT	 FORMAT
		 3D	 3D
		 TIMER	 TIMER
		 AV	 AV
		 TOP MENU	 TOP MENU
		 DISC NAV LIST	 DISC NAV LIST
		 MENU	 MENU
		 RETURN BACK	 RETURN BACK
		 SETTINGS OPT	 SETTINGS OPT
		 Options	 Options
		 Up	 Up
		 Down	 Down
		 Right	 Right
		 Left	 Left
		 OK	 OK
		 Stop	 Stop
		 PLAY MODE	 PLAY MODE
		 PLAY MODE	 PLAY MODE



