

 



 












 



 






 

















Original	Substituto	Original	Substituto
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop

Original	Substituto	Original	Substituto
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop





Original	Substituto	Original	Substituto
 << / Tune -	 <<	 AUX Pause	 Shift + Pause
 >> / Tune +	 >>	 AUX Play	 Shift + Play
 I<< / Preset -	 I<<	 AUX Stop	 Shift + Stop
 >>I / Preset +	 >>I	 AUX <<	 Shift + <<
 7CH Dir	 ECO 3D	 AUX >>	 Shift + >>
 1 / Tuner	 1	 AUX >>I	 Shift + >>I
 2 / CD	 2	 AUX I<<	 Shift + I<<
 3 / AUX	 3		
 4 / Tape	 4		
 5	 5		
 6 / Video 1	 6		
 7 / Video 2	 7		
 8 / Video 3	 8		
 9	 9		
 0	 0		
 AUX Power /	 Shift + Power		
 AUX Rec	 Shift + Rec		




 







 



 
 


 

 

 



 













 






 
 
 
 

 

 

 







 

 




Original	Substituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH +	 Ch +
 TV CH -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Substituto
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2


 

 
 
 


 
 
 

 

 
 



















 

 

 

 

 

 



 





 




Original	Substituto	Original	Substituto
	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR		Shift + Red
	DVD		Shift + Green
	SAT		Shift + Blue
	CABLE		Shift + Yellow
	DVD Power		Power
	DVD Menu		Menu
	DVD Audio Sel.		Dual
	DVD Subtitle		Subt
	DVD Zoom		3D
	DVD OSD /		Format
	DVD Up		Up
	DVD Left		Left
	DVD Enter		Ok
	DVD Right		Right
	DVD Down		Down
	DVD Display		Info
	DVD Pause		Pause
	DVD Play		Play
	DVD Stop		Stop
	DVD <<		<<
	DVD >>		>>
	DVD I<<		I<<
	DVD >>I		>>I
	DVD 1		1
	DVD 2		2
	DVD 3		3
	DVD 4		4
	DVD 5		5
	DVD 6		6
	DVD 7		7





Original	Substituto	Original	Substituto
	AUDIO		Red
	CD		Green
	AUX		Yellow
	TV		Blue
	VCR		Shift + Red
	SAT		Shift + Blue
	CABLE		Shift + Yellow
	DVD		Shift + Green
	CD Pause		Pause
	CD Play		Play
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	CD 1		1
	CD 2		2
	CD 3		3
	CD 4		4
	VCR Power		Shift + Power
	VCR CH Sel.		Shift + Media
	VCR Rec		Shift + Rec
	VCR Play		Shift + Play
	VCR Mute		Shift + Mute
	VCR >>		Shift + >>
	VCR <<		Shift + <<
	VCR Volume -		Shift + Vol -
	VCR Volume +		Shift + Vol +
	VCR CH+		Shift + Ch +
	VCR CH-		Shift + Ch -



