 

 










 
 



 





 



 

 

 

 

 

 

 







 



 

 



 



 









Original	Substituto	Original	Substituto
 Input	 AV / Input / RDS	 OK	 OK
 Power	 Power	 Right	 Right
 Xumo	 Setup / OPT /	 Down	 Down
 Netflix	 Red / Netflix / Search	 Back	 Back / Return
 Amazon	 Blue / Prime Video / Random	 Guide	 Guide / EPG / -/-
 <<	 << / Tune-	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 V	 Display / Media
 Play	 Play / Slow	 CH+ / Page+	 CH+ / Page+
 >>	 >> / Tune+	 Vol-	 Vol-
 CC	 Subtitle / EQ	 CH- / Page-	 CH- / Page-
 Rec	 Rec / Rec Mode	 Mute	 Mute / Dimmer
 Stop	 Stop / Hold	 [ ]	 Zoom / Size
 Menu	 Menu / Home	 PIC	 Picture / Format
 Exit	 Exit / Cancel / Clear	 Recall	 Fav / Marker / PC
 Info	 Info / Angle	 1	 1
 Up	 Up	 2	 2
 Left	 Left	 3	 3





Original		Substituto		Original		Substituto	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
ENTER	Enter	LIST SMART	Smart / List				
0	0	HDMI - BAT 0	0				
--	--	GOTO TEXT	Text / Goto				

