 










 



 
 
 
 
 
 




 

 








Original	Substituto
 Power	 Power
 Mute	 Mute
 Tv/Radio	 TV/R
 FAV	 Pre Ch
 World/Internet	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 LIB	 List
 P:P	 AV

Original	Substituto
 Music/Photo/Cam	 3D
 EPG	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Exit	 Exit
 Info	 Info
 Back	 Back
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Stop	 Stop
 Play	 Play





	Original	Substituto		Original	Substituto
	Rec	 Rec			
	Pause	 Pause			
	>>	 >>			
	<<	 <<			
	Text	 Text			
	Subt.	 Subt			
	Audio	 Dual			
	OPT	 Options			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Blue	 Blue			

