



Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AUX		Shift + 7
	USB		Shift + 8
	Card		Shift + 4
	DVD		Shift + 2
	Tuner		Shift + 6
	Tape		Shift + 5
	OSD/Info		Info / Angle
	Prog		TV/Radio /
	Setup		Setup / OPT /
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Title		Shift + Sound / Title
	Subtitle		Subtitle / EQ
	Timer		Shift + Sleep / Timer
	+10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	Play		Play / Slow
	Clock		Back / Return
	Pause		Pause / Step / Freeze
	Enter		OK
	Up/Preset+		Up
	Down/Preset-		Down
	>>/Tun+		>> / Tune+





Original	Substituto
	<< / Tune-
	I<<
	>>I
	Stop / Hold
	Green / APP / Repeat
	Text / Goto
	Rec / Rec Mode
	Vol-
	Vol+
	Mute / Dimmer
	Picture / Format
	+ Shift + Subtitle / EQ
	+ Shift + Audio / Lang I/II
	Sound / Title
	Display / Media
	D.Menu / Top
	Blue / Prime Video / Random

Original	Substituto
	AV / Input / RDS
	Zoom / Size
	Eject / Surround
	+ Shift + Info / Angle
	+ Shift + Pause / Step /
	+ Shift + Play /

