



Original	Substituto	Original	Substituto
Power	Power	Vol-	Vol-
Source (Games)	AV / Input / RDS	World/Internet	Smart / List
1	1	PR-	CH- / Page-
2	2	Menu	Menu / Home
3	3	Q.Menu	D.Menu / Top
4	4	Up	Up
5	5	Left	Left
6	6	OK	OK
7	7	Right	Right
8	8	Down	Down
9	9	Back	Back / Return
TV	TV/Radio /	Exit	Exit / Cancel / Clear
0	0	i	Info / Angle
Recall	Fav / Marker / PC	Movie-Music-Phot	Display / Media
Vol+	Vol+	Guide	Guide / EPG / -/-
Mute	Mute / Dimmer	* / 0	Picture / Format
PR+	CH+ / Page+	* / 0..	Setup / OPT /

Original	Substituto	Original	Substituto
Power	Power	Vol-	Vol-
Source (Games)	AV / Input / RDS	World/Internet	Smart / List
1	1	PR-	CH- / Page-
2	2	Menu	Menu / Home
3	3	Q.Menu	D.Menu / Top
4	4	Up	Up
5	5	Left	Left
6	6	OK	OK
7	7	Right	Right
8	8	Down	Down
9	9	Back	Back / Return
TV	TV/Radio /	Exit	Exit / Cancel / Clear
0	0	i	Info / Angle
Recall	Fav / Marker / PC	Movie-Music-Phot	Display / Media
Vol+	Vol+	Guide	Guide / EPG / -/-
Mute	Mute / Dimmer	* / 0	Picture / Format
PR+	CH+ / Page+	* / 0..	Setup / OPT /





Original	Substituto	Original	Substituto
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-o-]	 Zoom / Size		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

