


 













 





 







 




Original		Substituto		Original		Substituto	
	Standby		Power		Yellow		Yellow
	Mute		Mute		Blue / H.Lock		Blue
	P.Mode		Shift + Format		TV / DTV		TV/R
	S.Mode		Shift + Dual		CH.List		List
	Size		Format		Guide / Scan		Guide
	I>		Smart		Fav. / Still		Pre Ch
	Subtitle		Subt		Up		Up
	Timer		Shift + AV		Right		Right
	Mix		3D		Down		Down
	[_]		Shift + Subt		Left		Left
	[?] Reveal		Options		OK		Ok
	Message		Media		Info / Display		Info
	Text		Text		I/II / Nicam		Dual
	Source		AV		SUB / Sleep		Sleep
	Hold		Pause		ESC / Exit		Exit
	Red		Red		TV Menu		Menu
	Green		Green		DTV Menu		D. Menu





Original		Substituto	
	Vol +		Vol +
	Vol -31552073C6594		Vol -
	CH +		Ch +
	CH -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject
	Recall		Back

Original		Substituto	

