

 
 



 



 

 


 
 





 


 





 



 

 

 
 
 



 


 
 



 


 
 







 

 




Original		Substituto		Original		Substituto	
	Power		Power		Classical		1
	Standby	 + 	Shift + Power		Live/Club		2
	Volume+		Vol +		Entertain		3
	Volume-		Vol -		Movie		4
	Mute		Mute		Stereo		5
	Up / Preset/CH+		Up		Enhancer		6
	Down / Preset/CH-		Down		Sur.Decode		7
	Right /		Right		Parameter		8
	Left / A/B/C/D/E-		Left		Multi CH In		9
	Menu/Set Menu/Srch Mode		Menu				0
	Enter		Ok		Sleep		Pre Ch
	Return/Memory		Back		<</Info		<<
	Title/Level/Band		TV/R		>>/Eon		>>
	Display		Info		I<</Mode PTY		I<<
	Audio		Dual		>>I/PTY Seek		>>I
	Pure Direct		Smart		Scene 1		Red
	Straight		Media		Scene 2		Green





Original	Substituto
	Yellow
	Blue
	Shift + 1
	Shift + Yellow
	Shift + 3
	Shift + 4
	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + Pre Ch

Original	Substituto





Original	Substituto	Original	Substituto
 Power	 Power	 5	 5
 Volume+	 Vol +	 6	 6
 Volume-	 Vol -	 7	 7
 Mute	 Mute	 8	 8
 Band	 TV/R	 9	 9
 Search Mode	 AV	 0	 0
 Memory	 Back	 ENT	 Pre Ch
 Preset Up	 Up	 Info	 Red
 Preset Down	 Down	 PTY Seek Start	 Blue
 Right A/B/C/D/E	 Right	 Eon	 Green
 Left A/B/C/D/E	 Left	 Mode PTY Seek	 Yellow
 Enter	 Ok	 Power	 Shift + Power
 Display	 Info	 Up V-AUX/Dock	 Shift + Up
 1	 1	 Down	 Shift + Down
 2	 2	 Right V-AUX/Dock	 Shift + Right
 3	 3	 Left	 Shift + Left
 4	 4	 Enter V-AUX/Dock	 Shift + Ok





Original	Substituto
Audio V-AUX/Dock	Dual
Display	Shift + Info
Return	Shift + Back
Menu	Menu
Title V-AUX/Dock	Shift + TV/R
1 V-AUX/Dock	Shift + 1
2 V-AUX/Dock	Shift + 2
3 V-AUX/Dock	Shift + 3
4 V-AUX/Dock	Shift + 4
5 V-AUX/Dock	Shift + 5
6 V-AUX/Dock	Shift + 6
7 V-AUX/Dock	Shift + 7
8 V-AUX/Dock	Shift + 8
9 V-AUX/Dock	Shift + 9
0 V-AUX/Dock	Shift + 0
+10	Shift + Guide
ENT	Shift + Pre Ch



 

Original	Substituto
<< V-AUX/Dock	<<
<<	<<
>>	>>
>> V-AUX/Dock	>>
Rec V-AUX/Dock	Rec
Stop	Stop
Pause	Pause
Play	Play



V-AUX/Dock








Original	Substituto
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 MD/CD-R	 6
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>

Original	Substituto
  <</Mode PTY	  <<
 >> /PTYSeek	 >>





Original	Substituto
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>
 I<</Mode PTY	 I<<

Original	Substituto
 >>I/PTY Seek	 >>I



Seek