



Original	Substituto	Original	Substituto
	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Red/Goto		Red / Netflix / Search
	Red/Goto	+	Shift + Text /
	Green/Angle		Info / Angle
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat	+	Shift + Green / APP /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B	+	Shift + Blue / Prime
	Blue/A-B		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Freeze/Hold	+	Shift + Stop /
	Freeze/Hold	+	Shift + Pause / Step /
	EPG		Guide / EPG / -/--
	D.Menu		D.Menu / Top

Original	Substituto	Original	Substituto
	Subtitle		Subtitle / EQ
	Zoom/Size		Zoom / Size
	Aspect	+	Shift + Picture / Format
	Subpage	+	Shift + Subtitle / EQ
	Media	+	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	D.Setup		Setup / OPT /
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I/Index		>>I / Preset+
	>>I/Index		Smart / List
	Menu		Menu / Home
	Lang/Audio		Audio / Lang I/II





Original	Substituto
	Up
	Left
	OK
	Right
	Sleep / Timer
	Down
	Shift + Sound / Title
	Exit / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3

Original	Substituto
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0
	Back / Return
	AV / Input / RDS
	Picture / Format
	Sound / Title

