 


 
 




 
 


 

 





 


 





 





 
 


 








 


 










 

 






	Original	Substituto	Original	Substituto
	Power			Sleep
	Mute			Jump
	Source			FAV.CH
	I/II/Audio			Ok
	1			Up
	2			Down
	3			Left
	4			Right
	5			Vol+
	6			Vol-
	7			PR-
	8			PR+
	9			Red/D.Setup
	0			Green/Repeat
	Menu			Yellow/Zoom
	Info			Blue/Goto
	Exit			[≡+]/DTV/Radio
				Sleep
				Media
				Pre Ch
				Ok
				Up
				Down
				Left
				Right
				Vol +
				Vol -
				Ch -
				Ch +
				Red
				Green
				Yellow
				Blue
				TV/R





	Original	Substituto		Original	Substituto
	[≡◆]/USB/SD	Options		P.Size	Format
	[≡?]/Timeshift	Pause			
	[≡i]/PVR List	3D			
	Rec	Rec			
	Stop	Stop			
	Play/Pause	Play			
	<<<	<<<			
	>>>	>>>			
	<<<	<<<			
	>>>	>>>			
	DVD Menu	D. Menu			
	Text	Text			
	Subtitle	Subt			
	Guide	Guide			
	Eject	Eject			
	P.Mode	+ Shift + Format			
	S.Mode	+ Shift + Dual			

