










 
 

 

 





















 
 

 






























 













 
 












Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Aspect		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol +		Vol+
	Aspect		Shift + Picture / Format
	Nicam		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	Input		AV / Input / RDS
	CH -		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	PMode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC
	FAV -		Shift + Down





Original	Substituto
 FAV +	 +  Shift + Up
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Hold	 +  Shift + Stop /
 Lang	 +  Shift + Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Index / <<<	 <<< / Tune-
 Index / <<<	 Info / Angle
 Size / >>>	 >>> / Tune+
 Size / >>>	 Zoom / Size
 Reveal / I<<<	 I<<< / Preset-
 Subpage / >>>I	 >>>I / Preset+
 Subpage / >>>I	 Eject / Surround
 Rec	 Rec / Rec Mode
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Substituto
 Media	 +  Shift + Display / Media
 Red / TV/Radio	 TV/Radio /
 Red / TV/Radio	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

