




























 











































 

 





 













 




 
 




 



Original	Substituto	Original	Substituto
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Game	 Picture / Format	 Up	 Up
 7	 7	 CH+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 Enter	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH-	 CH- / Page-

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 SMART	
 VOL +	 MEDIA	 DISPLAY	
 VOL -	 CH PAGE		
 TV	 DVD	 CD - STB	
 1	 TAPE	 TUNER	
 4	 5	 6	
 AUX - HDD	 USB	 BLUETOOTH	
 7	 8	 9	
 GUIDE EPG	 HDMI - BAT	 PC	
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 www.mandis.tv			





Original	Substituto	Original	Substituto
	Down		Down
	Filelist		Smart / List
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<<		I<<< / Preset-
	>>>I		>>>I / Preset+
	Red/FAV./Daily		Red / Netflix / Search
	Green/Del./Weekl		Green / APP / Repeat
	Yellow/Move/P.Inf		Yellow / YouTube / Repeat
	Blue/Look/Timer		Blue / Prime Video / Random

Original	Substituto	Original	Substituto

