Mandis shop

Sony RM-SCU37

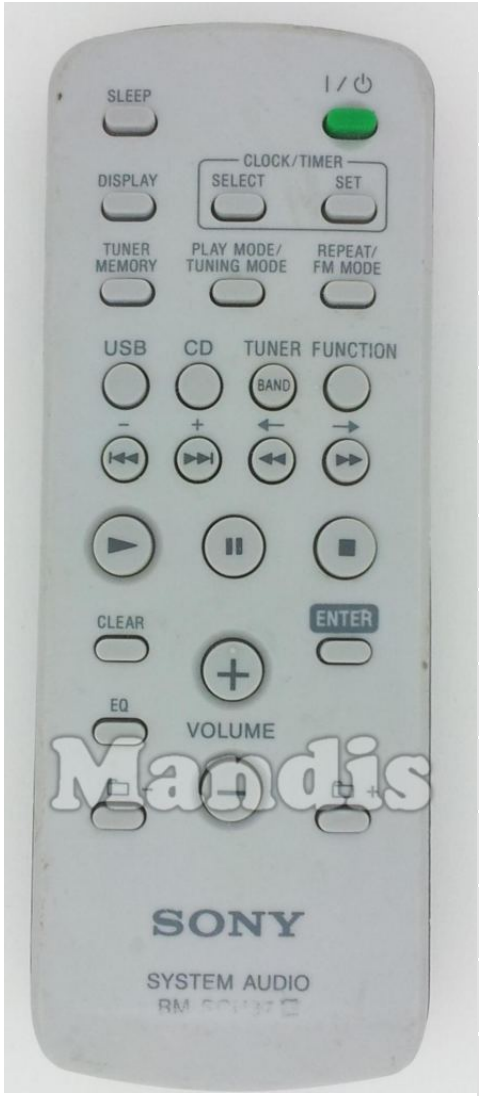

Original		Substituto	
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
I / ⏻	Standby		Power
DISPLAY	Display	MEDIA DISPLAY	Display / Media
SELECT	Clock/Timer	TOP MENU D.MENU	D.Menu / Top
SET	Clock/Timer Set	OPT-TOOLS SETUP	Setup / OPT /
TUNER MEMORY	Tuner Memory	LIST SMART	Smart / List
PLAY MODE/ TUNING MODE	Play Mode/Tuning Mode	PROGRAM TV/ RADIO	TV/Radio /
REPEAT/ FM MODE	Repeat/FM	APP REPEAT	Green / APP / Repeat
USB	USB	USB 8	8
CD	CD	CD - STB 3	3
TUNER BAND	Band/Tuner	TUNER 6	6
FUNCTION	Function	HOME MENU	Menu / Home
I<</-		PRESET-	I<< / Preset-
>>I/+		PRESET+	>>I / Preset+
<</←		TUNE-	<< / Tune-
>>/→		TUNE+	>> / Tune+
	Play	SLOW	Play / Slow

Original		Substituto	
	Pause	STEP - FREEZE	Pause / Step / Freeze
	Stop	HOLD	Stop / Hold
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
VOLUME	Vol+	VOL	Vol+
ENTER	Enter	OK	OK
EQ	EQ	EQ SUBTITLE	Subtitle / EQ
VOLUME	Vol-	VOL	Vol-
	Folder-	CH PAGE	CH- / Page-
	Folder+	CH PAGE	CH+ / Page+

https://controleremoto.pt/pt/Sony/1055575-6159-comando-de-substituicao-para-Sony-RM-SCU37-A1237275A.html