Mandis shop

Yamaha VAH0130

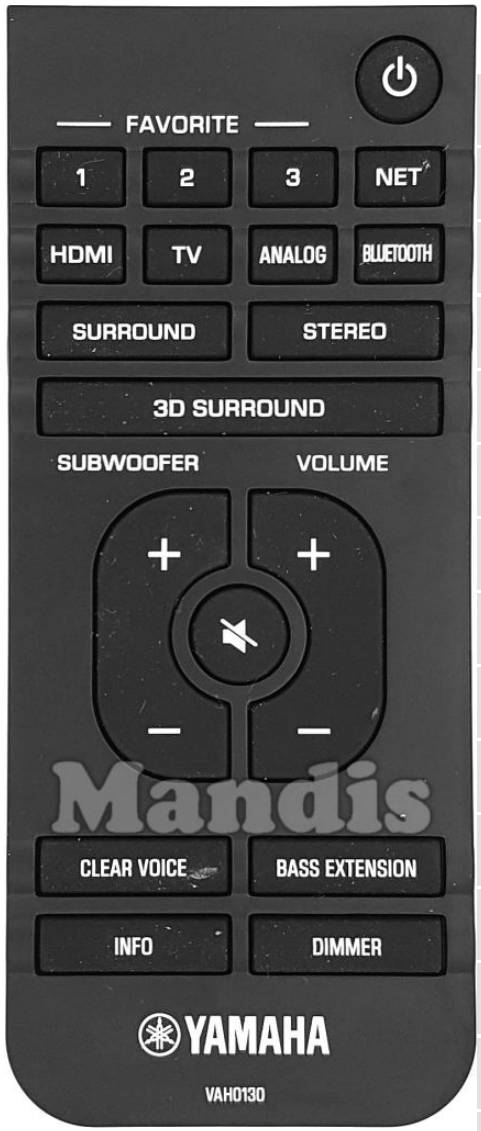

Original		Substituto	
	Power		Power
1	Favorite 1	1	1
2	Favorite 2	2	2
3	Favorite 3	3	3
NET	Net	APP MEDIA	Media
HDMI	HDMI	HOME SMART	Smart
TV	TV	SEARCH TV/R	TV/R
ANALOG	Analog	A	Red
BLUETOOTH	Bluetooth	B	Green
SURROUND	Surround	SOUND DUAL	Dual
STEREO	Stereo	SETTINGS OPT	Options
3D SURROUND	3D Surround	ECO 3D	3D
VOLUME +	Volume+	+ VOL	Vol +
−	Volume-	VOL −	Vol -
	Mute	MUTE	Mute
SUBWOOFER +	Subwoofer+	+ CH	Ch +
−	Subwoofer-	CH −	Ch -

Original		Substituto	
CLEAR VOICE	Clear Voice	CLEAR EXIT	Exit
INFO	Info	DISPLAY INFO	Info
DIMMER	Dimmer	RETURN BACK	Back
BASS EXTENSION	Bass Extension	AD SUBT	Subt

https://controleremoto.pt/pt/Yamaha/1060904-91267-comando-de-substituicao-para-Yamaha-VAH0130-VAH01300.html