| Original | | Substituto | |
|---|---|---|---|
| | Power | | Power |
| | Source | | AV |
| | Mute | | Mute |
| | Tv/Status | | TV/R |
| | Windows/PC | | Smart |
| | MON | | 3D |
| | Back | | Back |
| | EPG | | Guide |
| | APP | | Media |
| | DTVm | | Options |
| | CRTL/DVD Menu | | D. Menu |
| | Size/Guide | | Format |
| | Picture/Rec Tv | | Shift + Format |
| | Sound/Live Tv | | Dual |
| | Menu | | Menu |
| | Text | | Text |
| | ←/Exit | | Exit |

| Original | | Substituto | |
|---|---|---|---|
| | Info | | Info |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | OK | | Ok |
| | Still | | List |
| | P+ | | Ch + |
| | PIP | | Eject |
| | P- | | Ch - |
| | Focus | | Subt |
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Red/Delete | | Red |
| | Green/Skip | | Green |
| | Yellow/Insert | | Yellow |
| | Blue/Replace | | Blue |

| Original | | Substituto | |
|---|---|---|---|
| DELETE | Play | PLAY MODE | Play |
| SKIP | << | << | << |
| INSERT | >> | >> | >> |
| REPLACE | Stop | ■ | Stop |
| ● | Rec | REC MODE ● | Rec |
| I< | I< | << | I<< |
| >I | >I | >> | >>I |
| II | Pause | II | Pause |
| [ ≡?] / MTS | | SHIFT + SEARCH TV/R | Shift + TV/R |
| [ ≡♦] / Sleep | | PROG SLEEP | Sleep |
| [ ≡i ] / Time | | SHIFT + DISPLAY INFO | Shift + Info |
| [ ≡+] / Prepg | | SHIFT + AD SUBT | Shift + Subt |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |

| Original | | Substituto | |
|---|---|---|---|
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| 0 | 0 | 0 | 0 |
| -/-- CLEAR | -/--/Clear | SHIFT + -/-- GUIDE | Shift + Guide |
| DTV ALPHA | DTV/Alpha | FAV PRE-CH | Pre Ch |

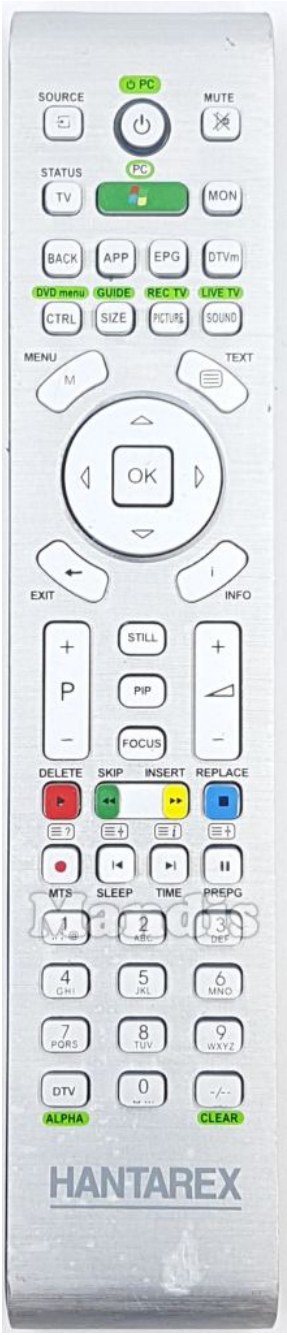


| Original | | Substituto | |
|---|---|---|---|
| | Power | | Power |
| | Source | | AV |
| | Mute | | Mute |
| | TV/Status | | TV/R |
| | Windows/PC | | Smart |
| | Mon | | 3D |
| | Back | | Back |
| | APP | | Media |
| | EPG | | Guide |
| | DTVm | | Options |
| | CTRL/DVD Menu | | D. Menu |
| | Size/Guide | | Format |
| | Picture/Rec Tv | | Shift + Format |
| | Sound/Live Tv | | Dual |
| | Menu | | Menu |
| | Text | | Text |
| | ←/Exit | | Exit |

| Original | | Substituto | |
|---|---|---|---|
| | Info | | Info |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | OK | | Ok |
| | P+ | | Ch + |
| | P- | | Ch - |
| | Focus | | Subt |
| | Still | | List |
| | PIP | | Eject |
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Red/Delete | | Red |
| | Green/Skip | | Green |
| | Yellow/Insert | | Yellow |
| | Blue/Replace | | Blue |

| Original | | Substituto | |
|---|---|---|---|
| DELETE | Play | PLAY MODE | Play |
| SKIP | << | << | << |
| INSERT | >> | >> | >> |
| REPLACE | Stop | ■ | Stop |
| | Rec | REC MODE | Rec |
| | I< | I<< | I<< |
| | >I | >>I | >>I |
| | Pause | II | Pause |
| | [ ≡?] / MTS | SHIFT + SEARCH TV/R | Shift + TV/R |
| | [ ≡i ] / Time | SHIFT + DISPLAY INFO | Shift + Info |
| | [ ≡◆] / Sleep | PROG SLEEP | Sleep |
| | [ ≡+] / Prepg | SHIFT + AD SUBT | Shift + Subt |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |

| Original | | Substituto | |
|---|---|---|---|
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| 0 | 0 | 0 | 0 |
| -/-- CLEAR | -/--/Clear | SHIFT + -/-- GUIDE | Shift + Guide |
| DTV ALPHA | DTV/Alpha | FAV PRE-CH | Pre Ch |

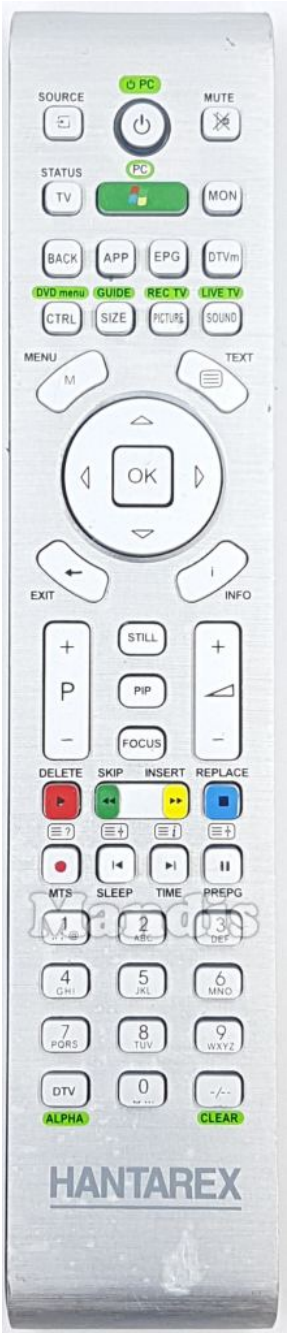


| Original | | Substituto | |
|---|---|---|---|
| | Power | | Power |
| | Source | | AV |
| | Mute | | Mute |
| | Tv/Status | | TV/R |
| | Windows/PC | | Smart |
| | Mon | | 3D |
| | Back | | Back |
| | APP | | Media |
| | EPG | | Guide |
| | DTVm | | Options |
| | CRTL/DVD Menu | | D. Menu |
| | Size/Guide | | Format |
| | Picture/Rec Tv | | Shift + Format |
| | Sound/Live Tv | | Dual |
| | Menu | | Menu |
| | Text | | Text |
| | ←/Exit | | Exit |

| Original | | Substituto | |
|---|---|---|---|
| | Info | | Info |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | OK | | Ok |
| | P+ | | Ch + |
| | P- | | Ch - |
| | Still | | List |
| | PIP | | Eject |
| | Focus | | Subt |
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Red/Delete | | Red |
| | Green/Skip | | Green |
| | Yellow/Insert | | Yellow |
| | Blue/Replace | | Blue |

| Original | | Substituto | |
|---|---|---|---|
| DELETE | Play | PLAY MODE | Play |
| SKIP | << | << | << |
| INSERT | >> | >> | >> |
| REPLACE | Stop | ■ | Stop |
| | Rec | REC MODE | Rec |
| | I < | I << | I << |
| | >I | >>I | >>I |
| | Pause | II | Pause |
| | [ ≡♦] / Sleep | PROG SLEEP | Sleep |
| | [ ≡?] / MTS | SHIFT + SEARCH TV/R | Shift + TV/R |
| | [ ≡i ] / Time | SHIFT + DISPLAY INFO | Shift + Info |
| | [ ≡+] / Prepg | SHIFT + AD SUBT | Shift + Subt |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |

| Original | | Substituto | |
|---|---|---|---|
| 6 MNO | 6 | 6 | 6 |
| 7 PQRS | 7 | 7 | 7 |
| 8 TUV | 8 | 8 | 8 |
| 9 WXYZ | 9 | 9 | 9 |
| 0 | 0 | 0 | 0 |
| -/-- CLEAR | -/--/Clear | SHIFT + -/-- GUIDE | Shift + Guide |
| DTV ALPHA | DTV/Alpha | FAV PRE-CH | Pre Ch |