# Mandis shop

RM-SUXG1R

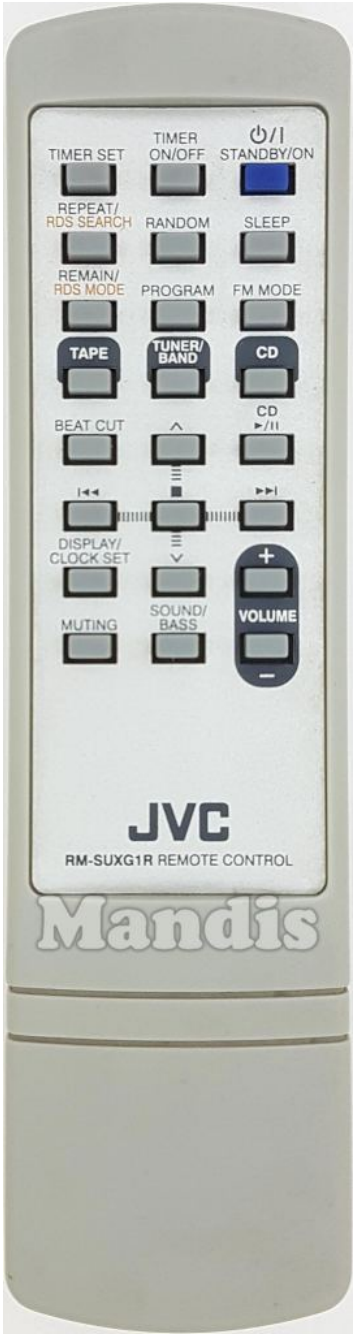


| Original | Substituto | Original | Substituto |
|---|---|---|---|
| Timer Set | Menu / Home | Stop | Stop / Hold |
| Timer On/Off | Exit / Cancel / Clear | >>I | >>I / Preset+ |
| Standby/On | Power | Display/Clock Se | Display / Media |
| Repeat/RDS | Green / APP / Repeat | Down | Down |
| Random | Blue / Prime Video / Random | Volume+ | Vol + |
| Sleep | Sleep / Timer | Muting | Mute / Dimmer |
| Remain/RDS | Fav / Marker / PC | Sound/Bass | Sound / Title |
| Program | TV/Radio / | Volume- | Vol - |
| FM Mode | Smart / List | | |
| Tape | 5 | | |
| Tuner/Band | 6 | | |
| CD | 3 | | |
| Beat Cut | Zoom / Size | | |
| Up | Up | | |
| Play CD | Play / Slow | | |
| Pause CD | Pause / Step / Freeze | | |
| I << | I << / Preset- | | |

https://controlremoto.pt/pt/JVC1673-9211-comando-substituto-para-JVC-RM-SUXG1R.htm