Mandis shop

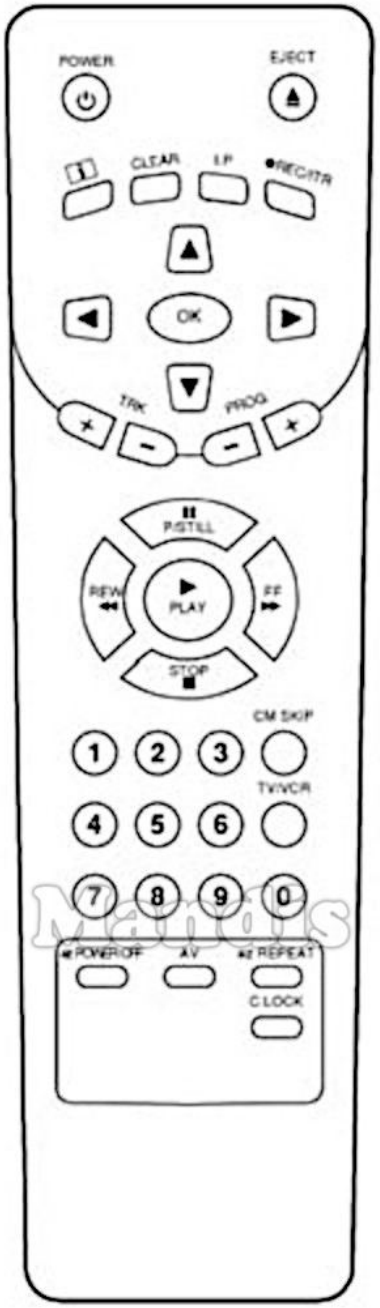

Original		Substituto	
POWER	Power	POWER	Power
EJECT	Eject	SURROUND	Eject / Surround
i	i	ANGLE INFO	Info / Angle
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
LP	LP	HOME MENU	Menu / Home
REC/ITR	Rec / ITR	REC MODE	Rec / Rec Mode
▲	Up	▲	Up
◀	Left	◀	Left
OK	OK	OK	OK
▶	Right	▶	Right
▼	Down	▼	Down
P/STILL	P/Still	STEP - FREEZE ❚❚	Pause / Step / Freeze
REW	Rew	TUNE- ◀◀	<< / Tune-
PLAY	Play	SLOW ▶	Play / Slow
FF	FF	TUNE+ ▶▶	>> / Tune+
STOP	Stop	HOLD ■	Stop / Hold
1	1	TV 1	1

Original		Substituto	
2	2	DVD 2	2
3	3	CD - STB 3	3
CM SKIP	CM Skip	MEDIA DISPLAY	Display / Media
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
TV/VCR	TV / VCR	LIST SMART	Smart / List
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
POWER OFF	ez Power Off	DIMMER MUTE	Mute / Dimmer
AV	AV	RDS AV INPUT	AV / Input / RDS
ez REPEAT	ez Repeat	APP REPEAT	Green / APP / Repeat
C.LOCK	C. Lock	TOP MENU D.MENU	D.Menu / Top

https://controleremoto.pt/pt/Bluesky/1066163-96251-comando-de-substituicao-para-Bluesky-XR20N.html