Mandis shop

Yamaha VQ086200

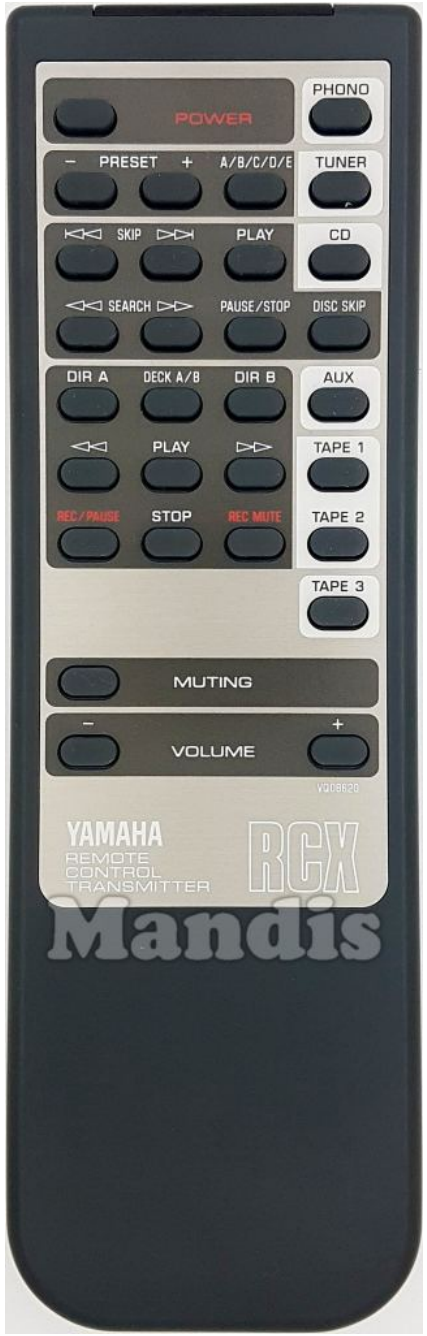

Original		Substituto	
POWER	Power	POWER	Power
PHONO	Phono	HOME SMART	Smart
TUNER	Tuner	OK	Ok
A/B/C/D/E	A/B/C/D/E	DISPLAY INFO	Info
PRESET +	Preset +	+ CH	Ch +
PRESET −	Preset -	CH −	Ch -
CD	CD	APP MEDIA	Media
PLAY	Play CD	PLAY MODE ▶	Play
SKIP ⏭	Skip ⏭ CD	⏭	⏭
⏮ SKIP	⏮ Skip CD	⏮	⏮
SEARCH ⏩	Search ⏩ CD	⏩	⏩
⏪ SEARCH	⏪ Search CD	⏪	⏪
PAUSE/STOP	Pause/Stop CD	⏸	Pause
DISC SKIP	Disc Skip CD	RETURN BACK	Back
AUX	AUX	A	Red
TAPE 1	Tape 1	B	Green
TAPE 2	Tape 2	C	Yellow

Original		Substituto	
TAPE 3	Tape 3	D	Blue
DIR A	Dir A Tape	SETTINGS OPT	Options
DECK A/B	Deck A/B Tape	SOUND DUAL	Dual
DIR B	Dir B Tape	AD SUBT	Subt
⏪	<< Tape	SHIFT + ⏪	Shift + <<
⏩	>> Tape	SHIFT + ⏩	Shift + >>
PLAY	Play Tape	SHIFT + PLAY MODE ▶	Shift + Play
REC/PAUSE	Rec/Pause Tape	REC MODE ●	Rec
STOP	Stop Tape	■	Stop
REC MUTE	Rec Mute Tape	SEARCH TV/R	TV/R
VOLUME +	Vol +	+ VOL	Vol +
VOLUME −	Vol -	VOL −	Vol -
MUTING	Muting	MUTE	Mute

https://ordered.com/pt/Yamaha/10742897-Controle-Substituto-para-Yamaha-VQ086200.htm